



# DIMENSIONAL LETTER LETTER INSTALLATION INSTRUCTIONS

MANY ORDERS WILL HAVE DUPLICATE LETTERS, FOR EXAMPLE "SCHOOL". FOR THIS REASON WE WILL NUMBER THE TEMPLATE AND EACH LETTER.


THE TEMPLATE WILL READ  
AND WILL BE NUMBERED

SCHOOL  
123456

EACH CHARACTER WILL BE STAMPED WITH THE CORRESPONDING TEMPLATE NUMBER ON THE BACK, YOU MUST USING MATCHING NUMBERS FOR A PROPER INSTALLATION, FOR EXAMPLE THE "O" STAMPED #4 MUST BE INSTALLED IN THE #4 TEMPLATE POSITION.

POSITION THE TEMPLATE ON THE WALL AND SECURE IT WITH MASKING TAPE. CHECK THE ALIGNMENT CAREFULLY. MAKE SURE THAT THE BASELINE OF THE LETTERS IS TRUE AND LEVEL.

1

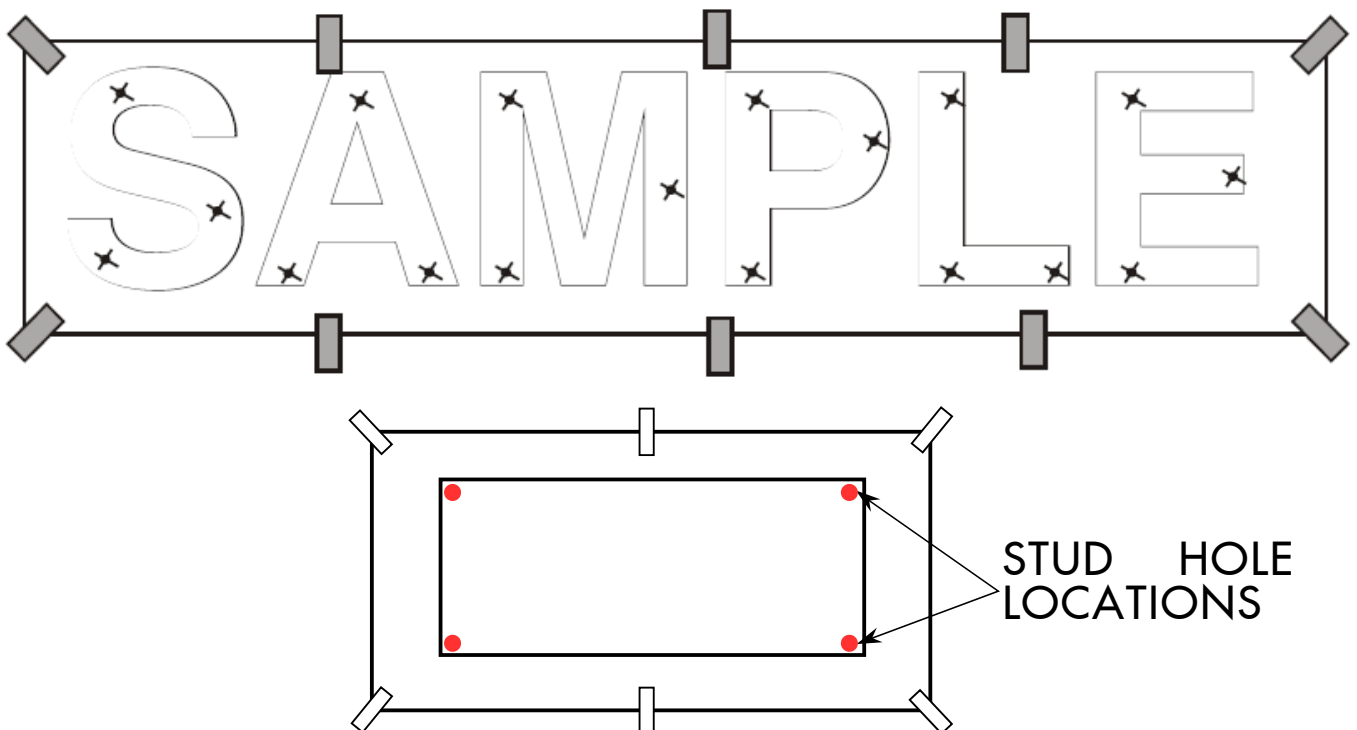



2

USING A CARBIDE TIPPED BIT, DRILL INTO THE MOUNTING SURFACE THROUGH EACH STUD LOCATION MARK. USE A BIT SLIGHTLY LARGER THAN THE STUD DIAMETER. MAKE THE HOLES SLIGHTLY DEEPER THAN THE LENGTH OF THE STUDS.

REMOVE THE TEMPLATE AND BLOW OUT THE HOLES, REMOVING ALL DEBRIS. FAILURE TO CLEAN OUT THE HOLES WILL RESULT IN POOR ADHESION.

3

4

SCREW THE STUDS INTO THE BACKS OF THE LETTERS. IF SPACERS ARE TO BE USED, SLIDE THEM OVER THE STUDS.

APPLY ADHESIVE TO THE ENDS OF EACH STUD AND PUSH THEM INTO THE WALL. ALLOW MINIMUM 2 HOURS FOR THE ADHESIVE TO SET UP.

5

